

EGR valve simulator connection diagram

2.2 HDI engines

All connection activities must be done with the ignition turned off!

1. Detach the EGR valve plug.
2. Connect the simulator to the EGR plug, Leave the EGR valve disconnected.
3. Cut the wire B (yellow).
4. Solder the blue and red cable from the simulator as shown in the picture.
5. Insulate the connections and mount the simulator in a safe place after connection.

If everything works fine, the controller should not report errors in the EGR system.
If the CE indicator remains lit, it is necessary to check and delete the fault codes from the motor controller memory.

The EGR valve must be in the closed position or plugged.

