

Fitting Instructions

BA 8750

Tail Gate Strut Conversion



Fit Packing washers between check arm pivot bracket to gain correct distance, so strut arm does not chafe on the door.




Fit strut to bracket using washers to pack out the gap



Fit fixing bracket to door side of the strut



The bracket can be fitted in different places depending on door card type. Make sure that all clearances are correct with door open and closed before drilling. (Lower option, make sure that the door closes with clearance to the floor tread plate/trim etc.)

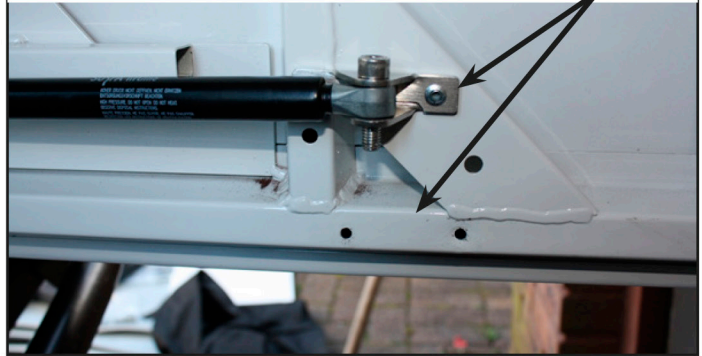

Images shows fitment to vehicles pre 2007



Images shows fitment to vehicles 2007 on (Puma), please note extra bracket required for fitment

Fitting Instructions: BMNR270819