

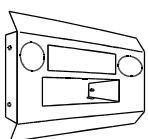






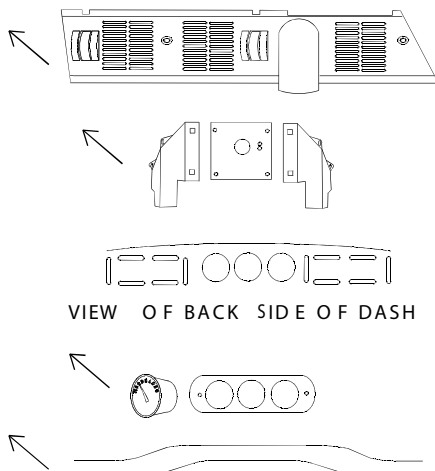



# **Your Defender Dash Kit Includes The Following:**


<b>A</b>  <b>1 pc</b> face plate	<b>E</b>  <b>4 pcs</b> M4 x 16mm
<b>B</b>  <b>1 pc</b> support tray	<b>F</b>  <b>2 pcs</b> 1" 25.4mm
<b>C</b>  <b>1 pc</b> support frame	<b>G</b>  <b>1 pc</b> 1.25" 32mm
<b>D</b>  <b>1 pc</b> switch mounting panel	<b>H</b>  <b>1 pc</b> .375" 9mm spacer
	<b>I</b>  <b>8 pcs</b> .5" 13mm

**REMOVE TRIM**

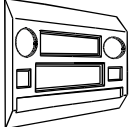


**A**


**B**  = CENTRE

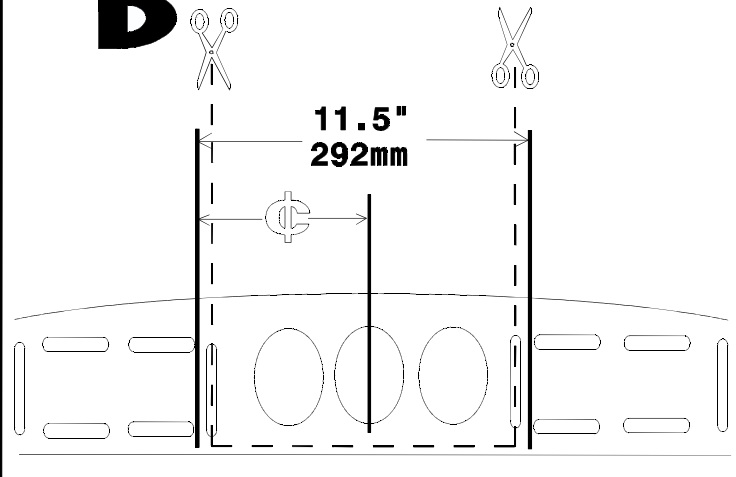


Maximum, opening size  
 (Cut undersize and trim later)


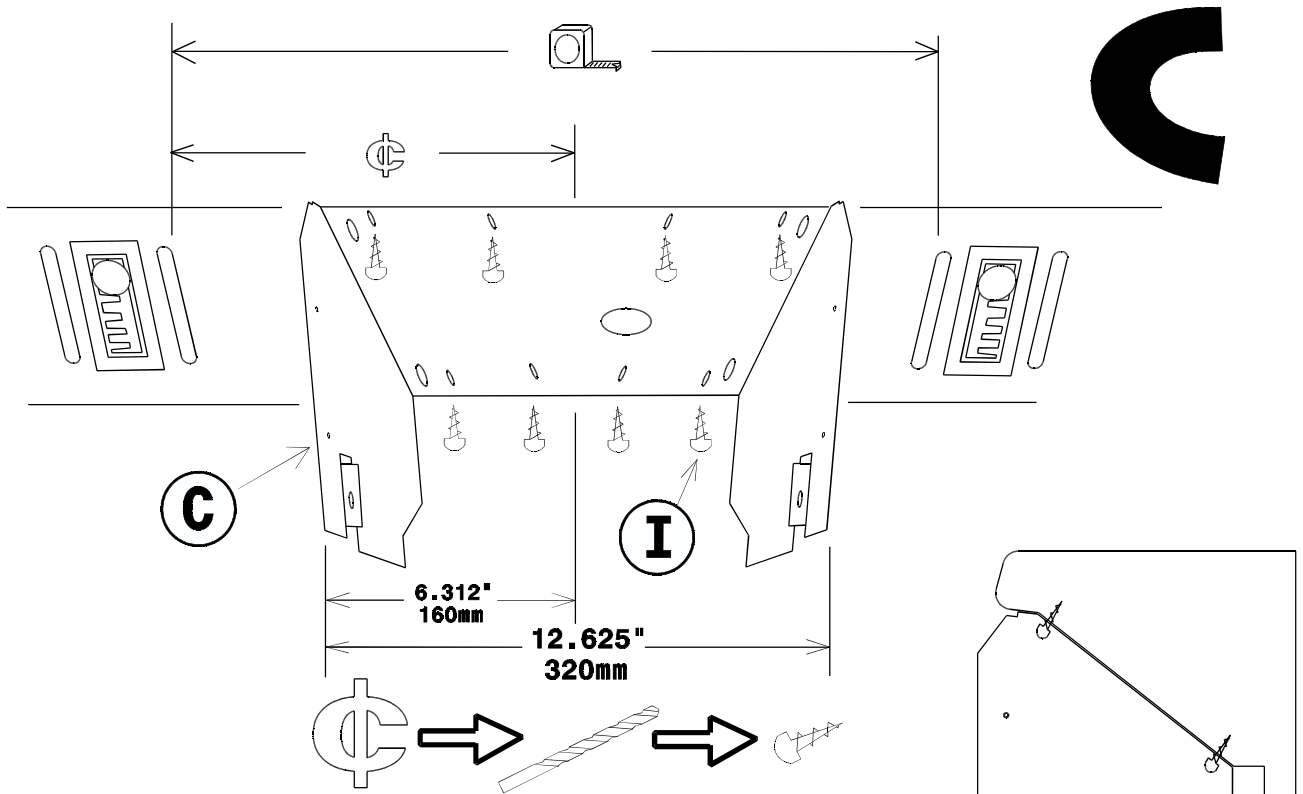


**HINT: USE DOUBLE-SIDED TAPE  
 TO KEEP PARTS FROM SLIPPING  
 AND LATER SQUEEING.**

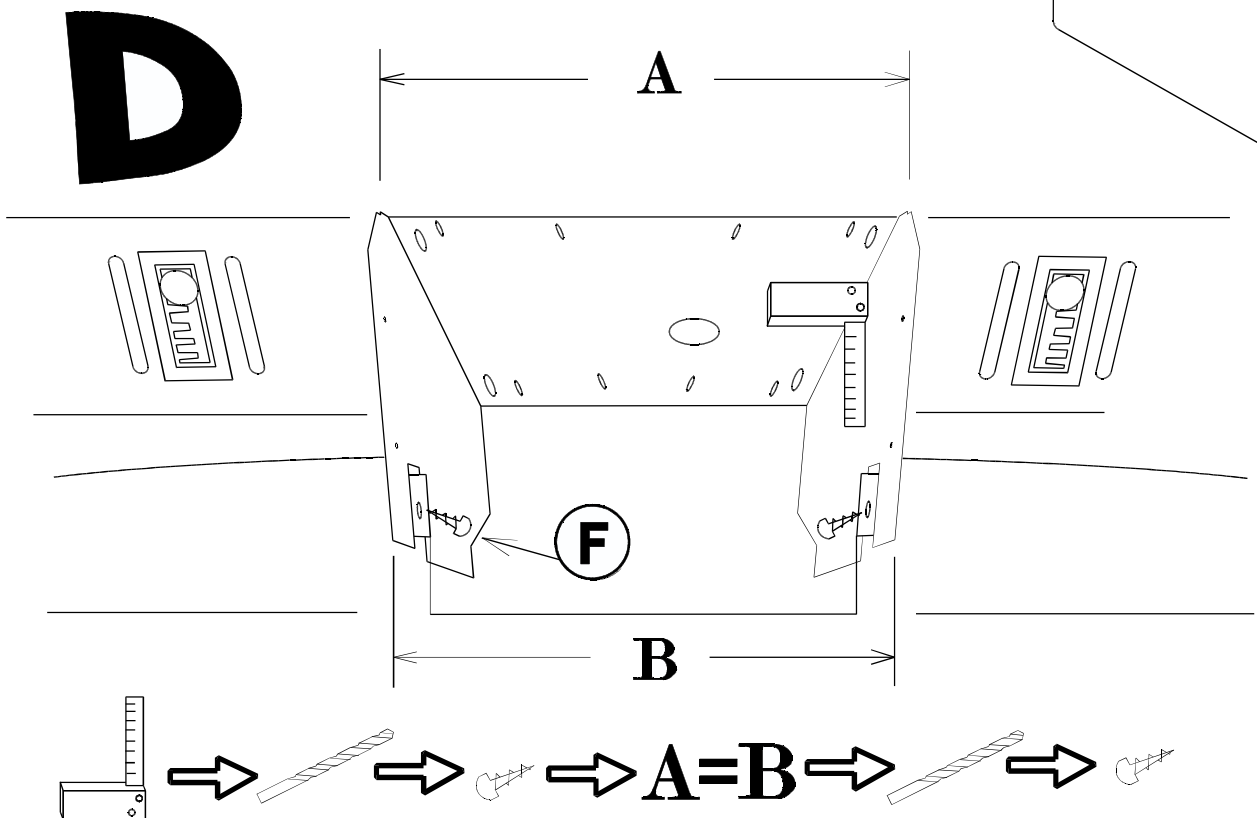

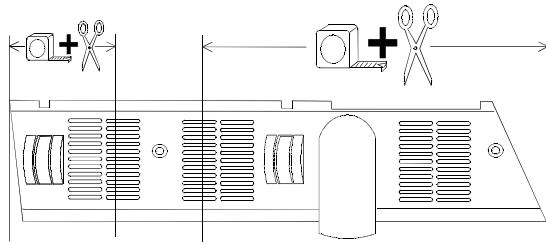

**E** Cut Trim, and Remove Cut Offs  
 Reinstall and fit support frame

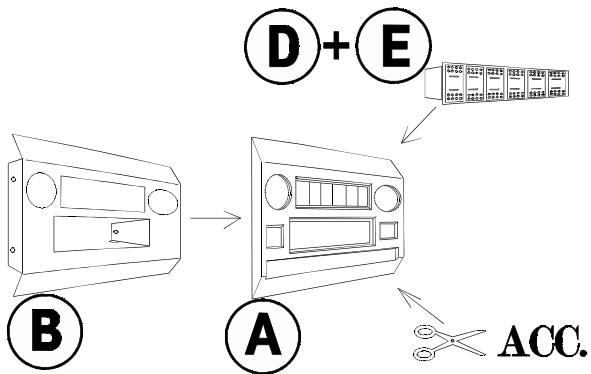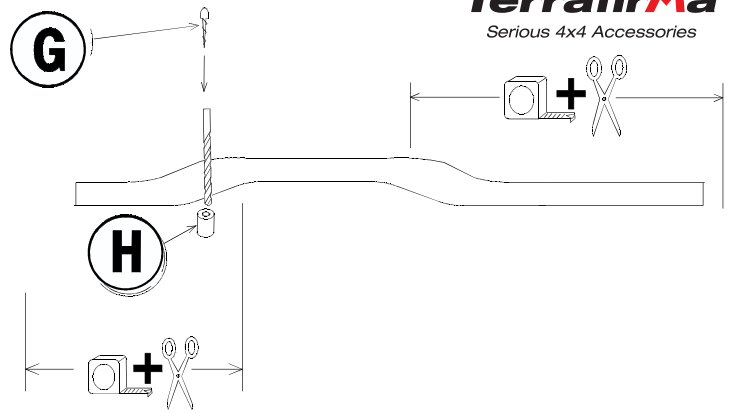

**F**

